

Order #XXXXX MOD-1701 Backlit Counter

Item	Qty.	Description
1/1A	1/1	22.1654"w CEI110 Horizontal Extrusion
2/2A	1/1	38"h CEI110 Vertical Extrusion w/ attached S10
3	1	38"h S44 Vertical Extrusion w/ Door Hinge
4	1	38"h S44 Vertical Extrusion w/ Door Stop
5/5A	1/1	16"w Z45 Horizontal Extrusion
6/6A	1/1	16"w Z45 Horizontal Extrusion


1/1 18.5"w Z45 Horizontal Extrusion 7/7A

Steps:


1) Connect horizontals [1,1A] between verticals [2,2A], sliding Infill between verticals.


See CEI-110 Corner Connection detail.

- 2) Attach horizontal [5] between verticals [2A,4], sliding Infill between verticals, then secure with horizontal [5A].
- 3) Attach horizontal [6] between verticals [2,3], sliding Infill between verticals, then secure with horizontal [6A].
- 4) Attach horizontals [7,7A] between verticals [3,4].
- 5) Connect Door to vertical [3]. See Door Connection detail.
- 6) Connect shelf supports to Velcro on inside of Infills, place Shelf on top of supports.
- 7) Place Counter Top on top of assembled Counter base.
- 8) Attach lights and transformer. See Light details.
- 9) Install SEG Graphic to front of assembled light frame. See SEG Graphic Installation detail.

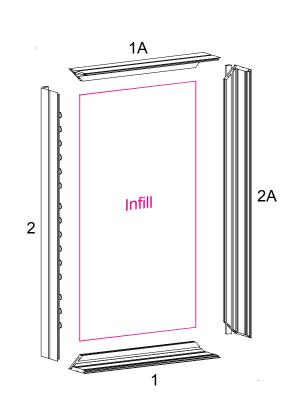


SEG Graphic Installation

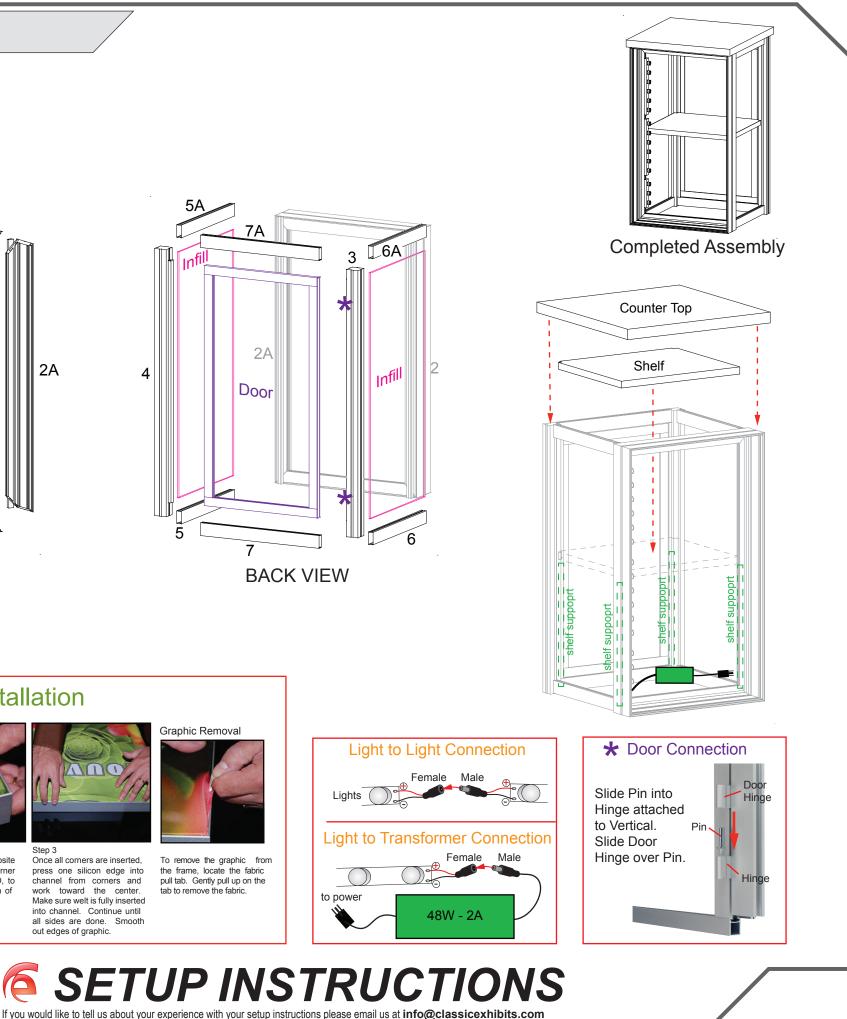

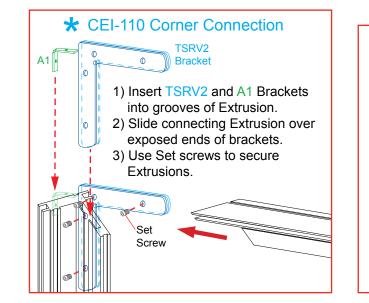


It is important to first insert Step 1

graphic into each alternate corner then to the sides of the frame. If this is not done graphic will not fit into the frame correctly

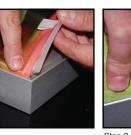



Step 2 Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside the corners. into the channel. Repeat for other side of this corner

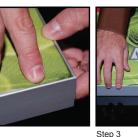


Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of

6

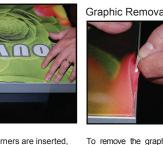





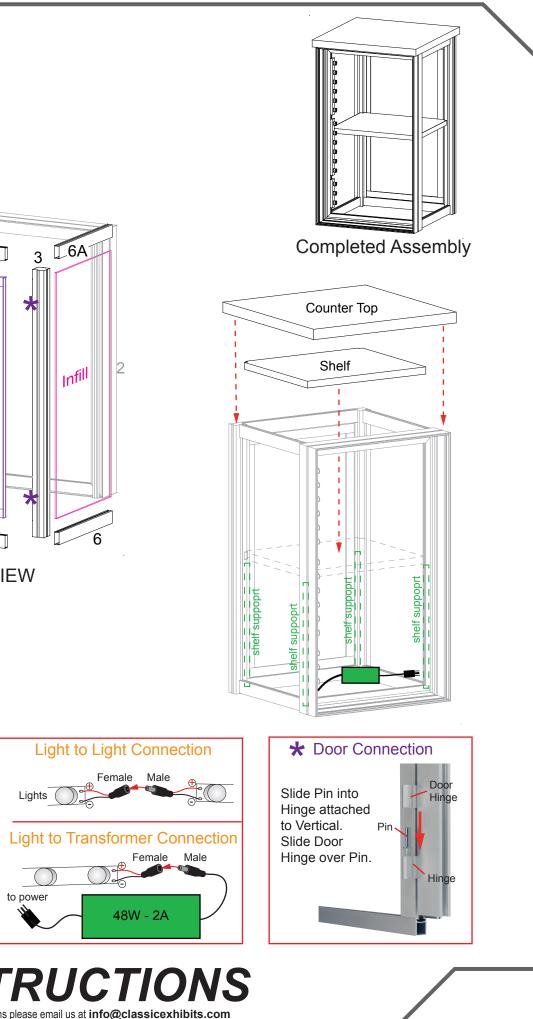


www.classicexhibits.com

Corner I




General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

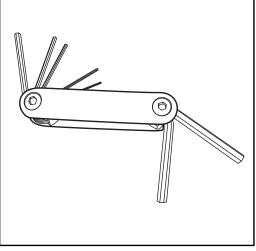

Hex Tool - Essential for Assembly

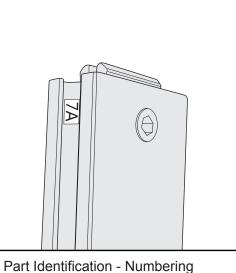







- Cleaning & Packing
 - For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
 - Keep exhibit components away from heat and prolonged sun exposure.
 Heat and UV exposure will warp and fade components.
 - Retain all provided Packing Materials.
 All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

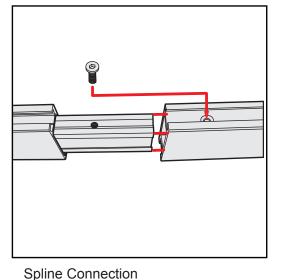

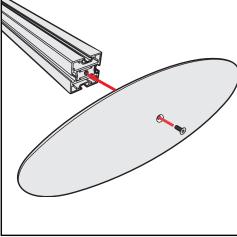


Base Plate & Extrusion Connection



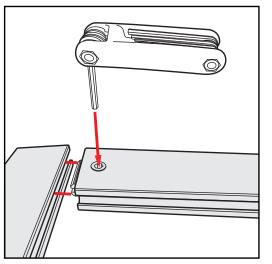

Extrusion & Lock Connection

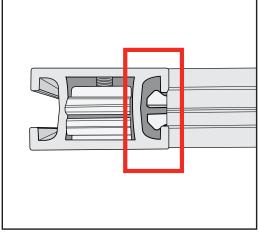

www.classicexhibits.com

Engaged Lock

ALL CONNECTIONS MUST BE TIGHTLY SECURED

LADDERS OR LIFTS MAY BE REQUIRED

DO NOT USE POWER TOOLS

