



Top View

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

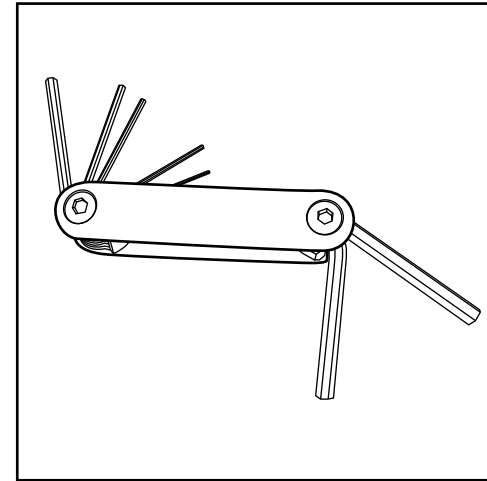

Hex Tool - Essential for Assembly

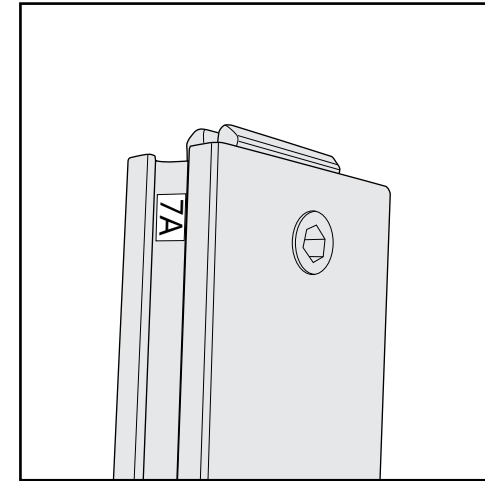

Part Identification - Numbering




WARNING

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

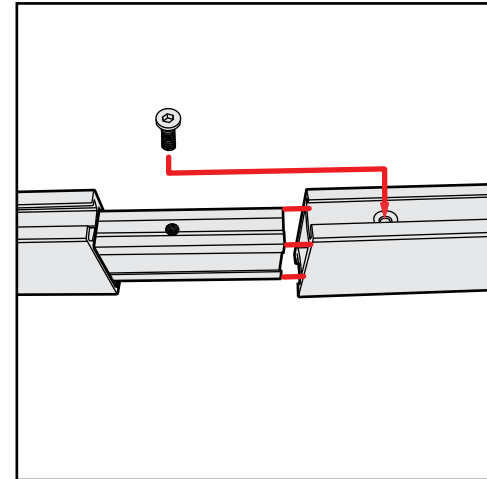


Spline Connection

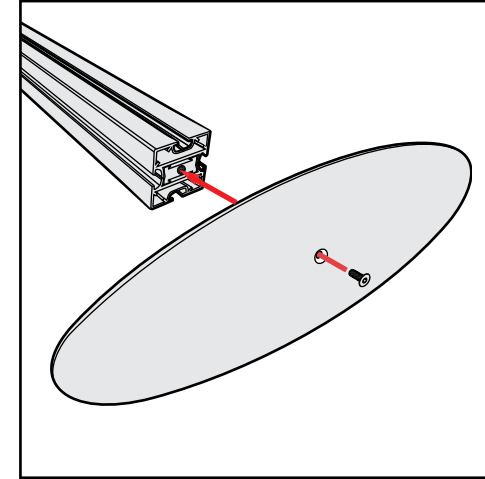


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS

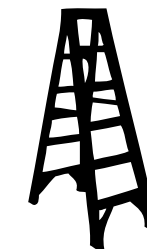

LADDERS OR LIFTS
MAY BE REQUIRED

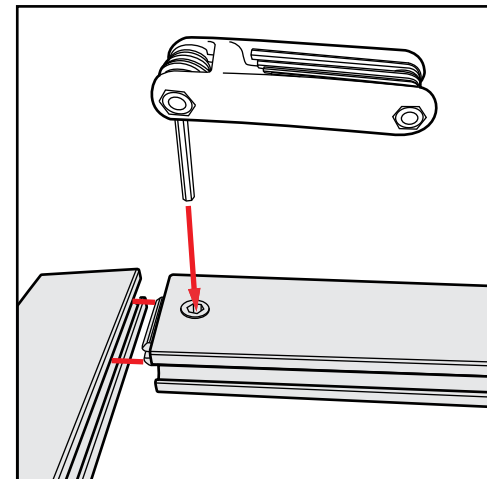

Extrusion & Lock Connection

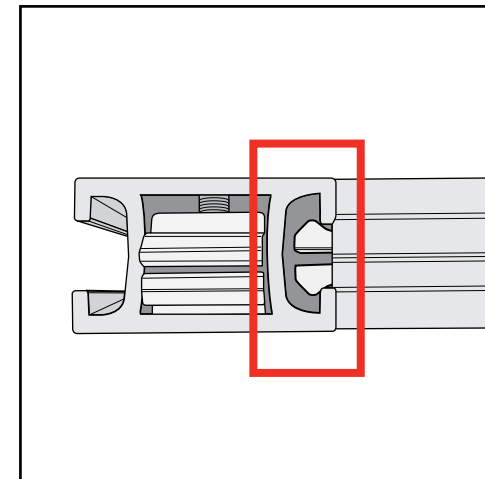

Engaged Lock




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

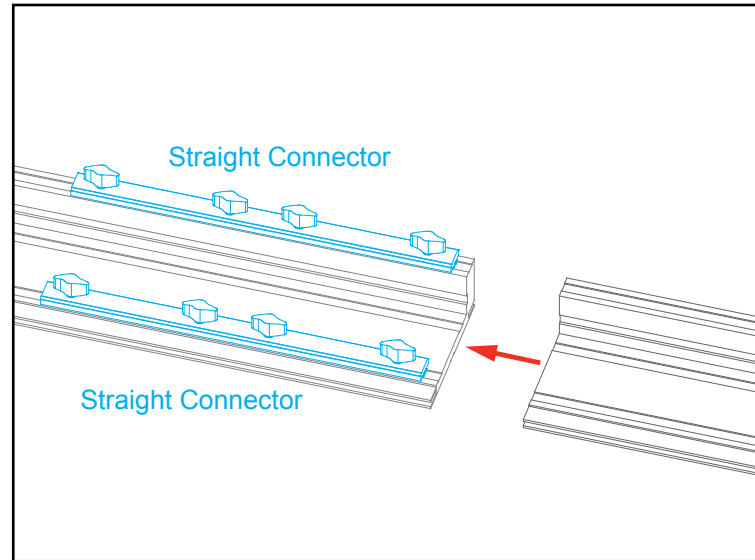

Slide both connectors across seam of extrusions.
Tighten all knobs.

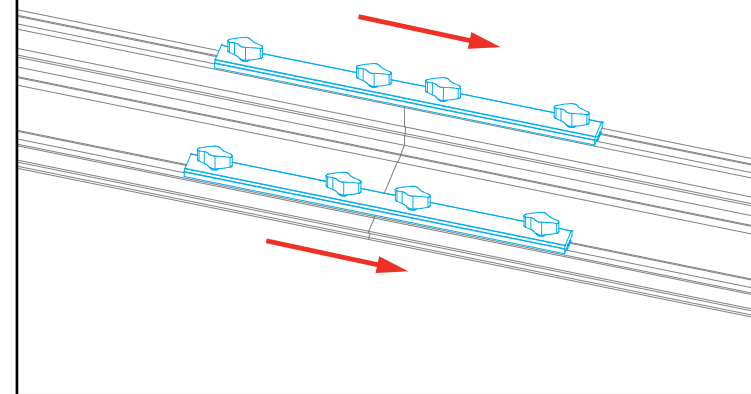

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.

Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.


All knobs must be tightened securely to ensure a proper connection.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly


- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

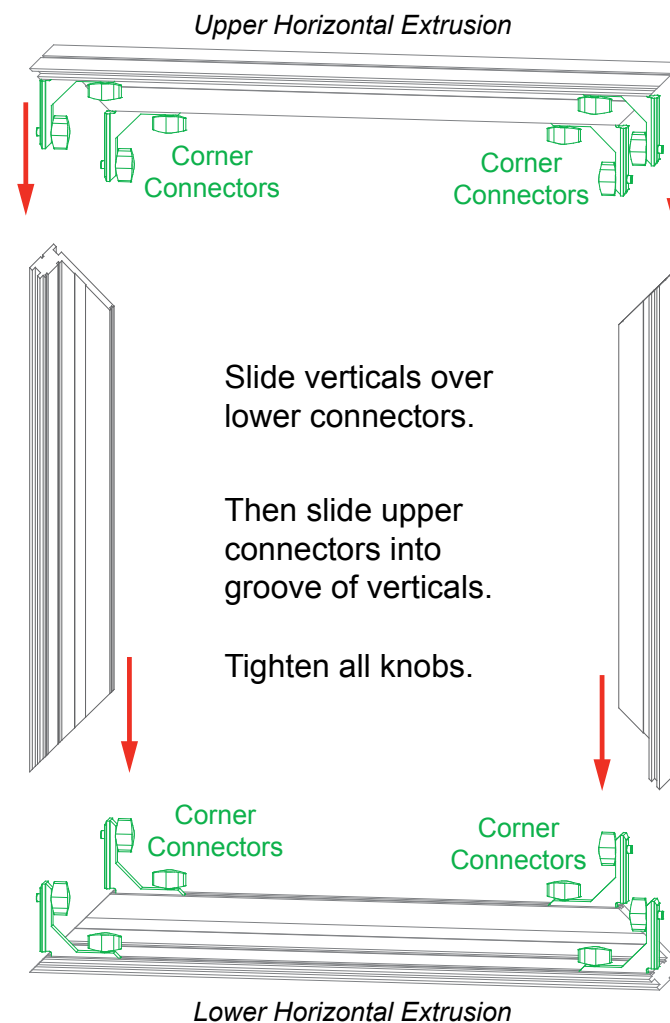

Adjust connectors if necessary to prevent gaps in connection.

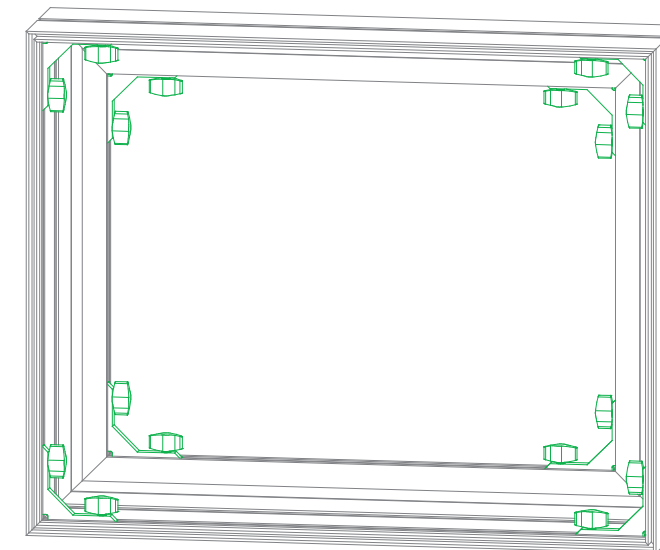





COMPLETED ASSEMBLY

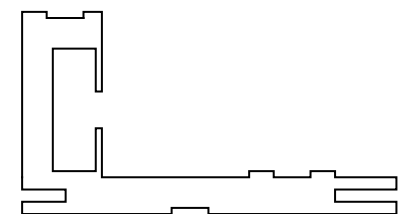


CEI110 Profile

All knobs must be tightened securely to ensure a proper connection.


- 1) Locate channels along the edges of extrusions
- 2) Insert graphic corners first into channels then center point of graphic into channels. Allows for proportional fit around the perimeter of the extrusion.
- 3) Working from center to corner, slide silicon edge on graphic into channel.
- 4) After all edges of graphic have been inserted into channels, step back and assess graphic fit, make adjustments where needed.

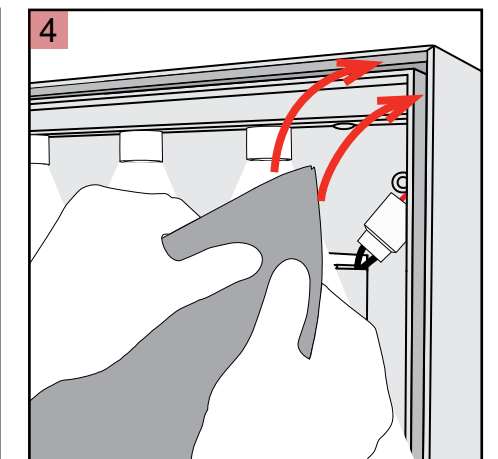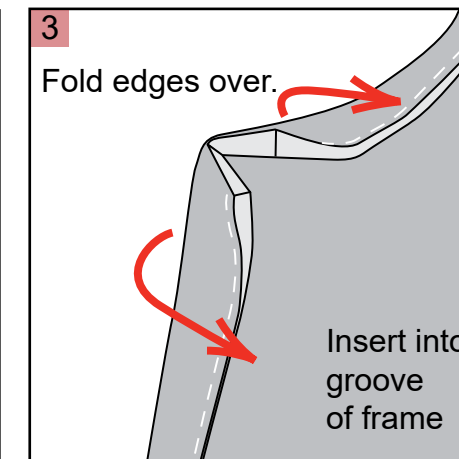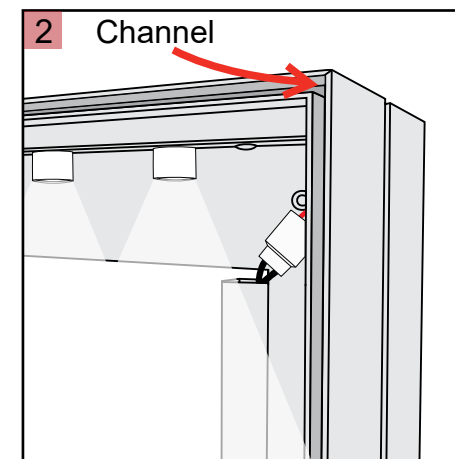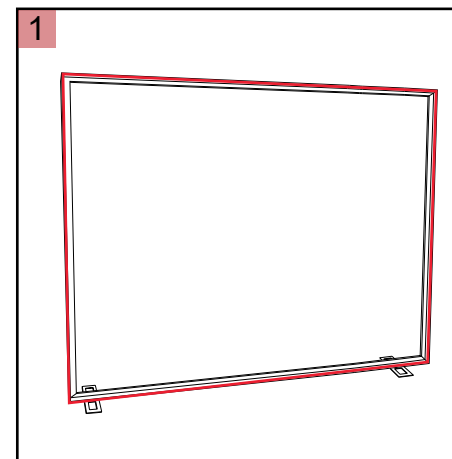


Top View of Each Level

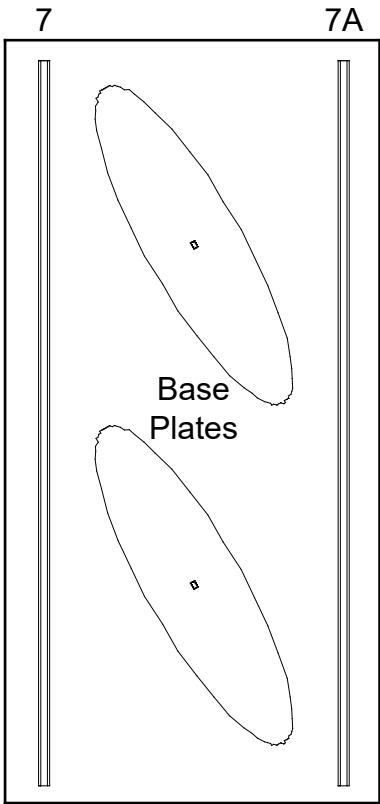


Level 1

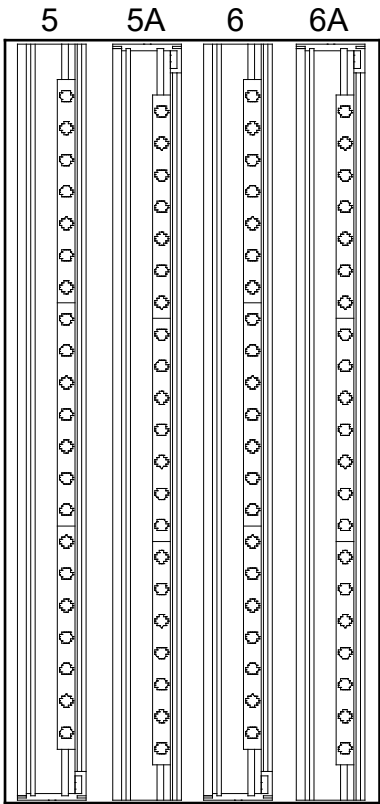

Level 2

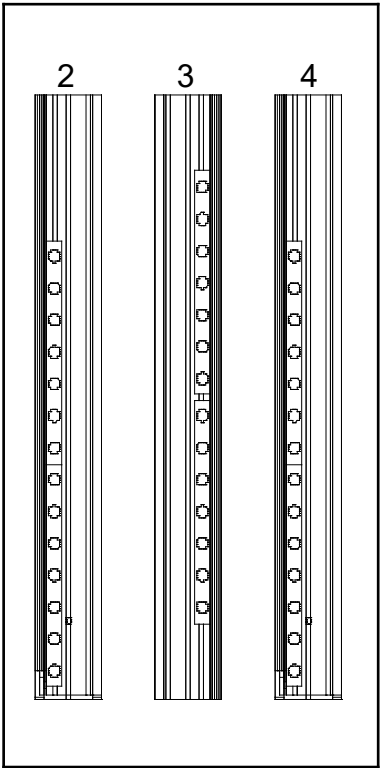

Level 3

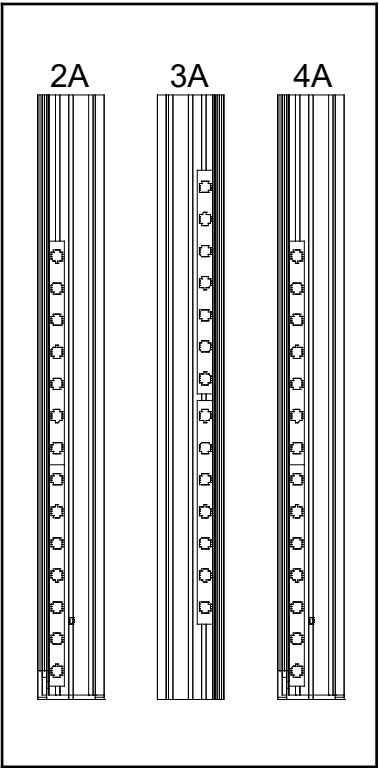

Level 4

Graphics

Setup Hardware


Item	Qty.	Description
1	2	Base Plate
2,2A	1,1	38" CEI110 Horizontal Extrusion
3,3A	1,1	38" CEI110 Horizontal Extrusion
4,4A	1,1	38" CEI110 Horizontal Extrusion
5,5A	1,1	47.5" CEI110 Vertical Extrusion
6,6A	1,1	47.5" CEI110 Vertical Extrusion
7,7A	1,1	45.6767" Z45 Vertical Extrusion

Steps:

- 1) Assemble CEI110 extrusions together, flat on floor, as shown. See CEI110 Frame Assembly sheet for instruction.
- 2) Attach base plates [1] to horizontals [2] and [3], using bolts, washers, and nuts, then lift assembled frame upright.
- 3) Connect verticals [7] and [7A] together. See [Z45 Straight Connection](#) detail.
- 4) Attach [7/7A] assembly to center of assembled CEI110 frame. See [Z45 Attachment](#) detail.
- 5) Connect light cords and transformers. See [Light Connection](#) and details.
- 6) Attach graphic to front of assembled frame. See SEG Graphic Installation sheet for details.

Keep PR53 connector attached to extrusion [7], when packing.


* Z45 Straight Connection

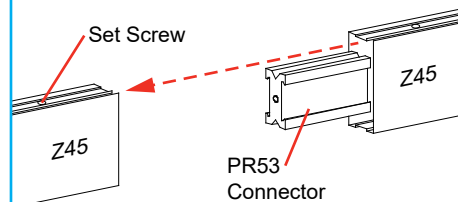


Insert connector into extrusions. Secure with set screws.

To prevent product loss, keep all screws attached to connector after disassembling.



Light to Light Connection



Light to Transformer Connection

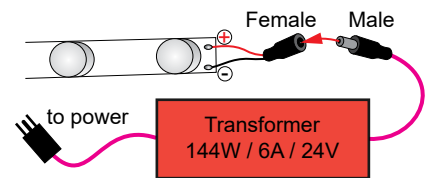


Maximum of 11 light bars per transformer.

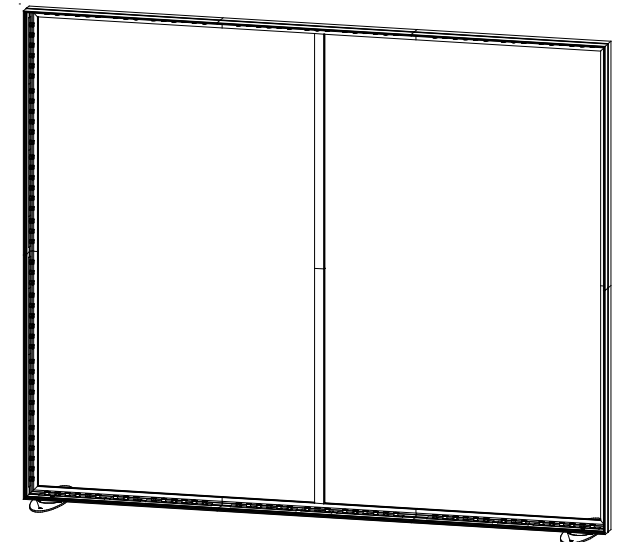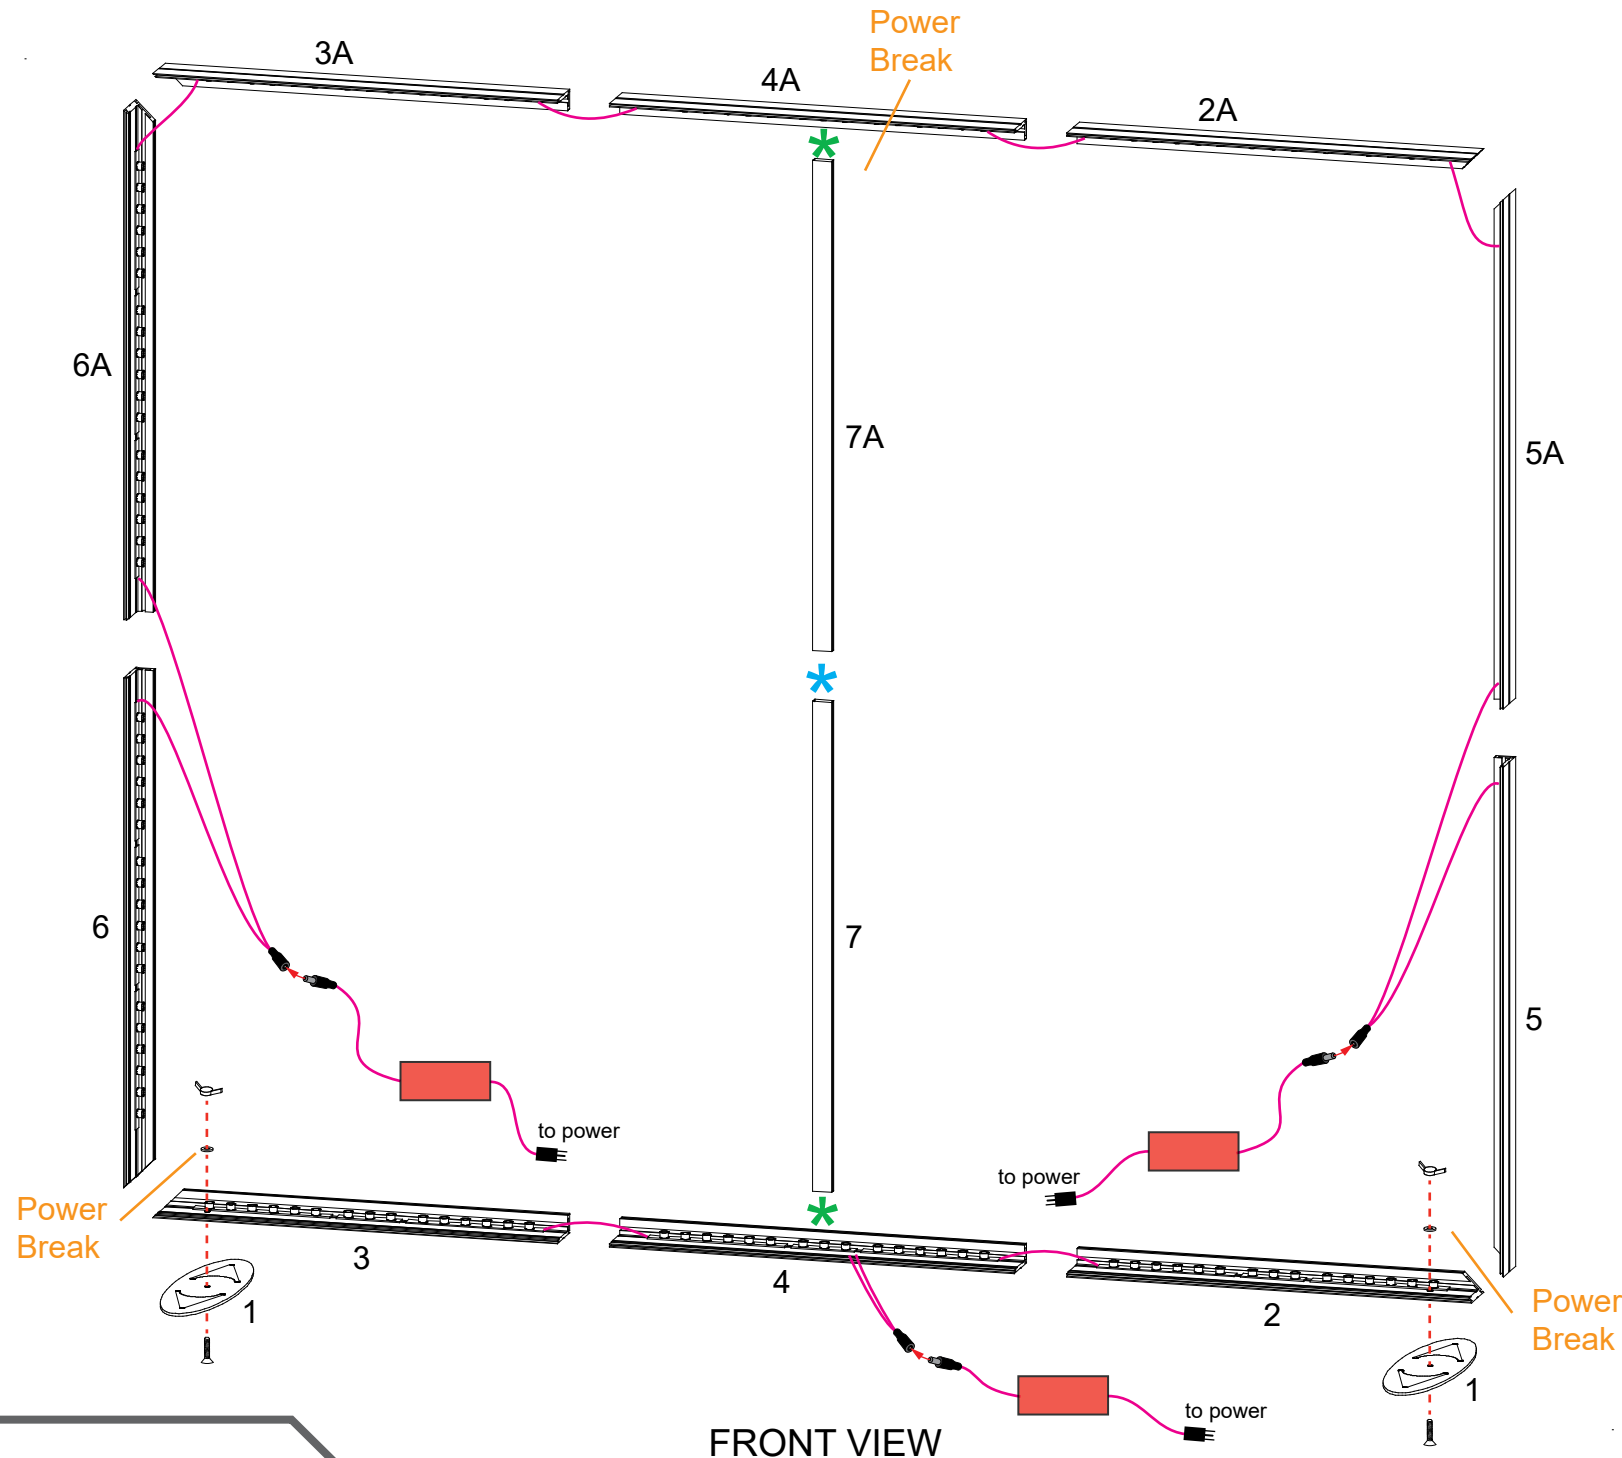

Completed Assembly

* Z45 Attachment

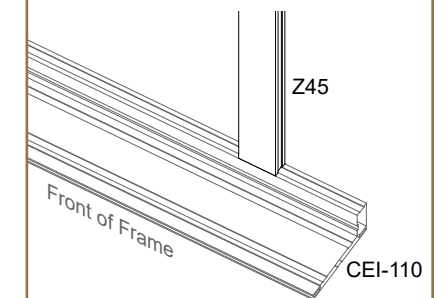

Attach Z45 vertical to back groove of CEI-110 horizontal.